

4-PIN code emergency override*The procedure to enter the 4-PIN code during arming*

1. Open the drivers door
2. Turn ignition from OFF to ON for 7 times and stay on ON for the 7th time
3. LED will be on for 5 seconds and then be off for 2 seconds
4. Then LED will flash once per second
5. Count the number of the flash times to enter the 4-PIN code. For example: if the first is 3 then turn ignition OFF when LED flash 3 times. Once ignition is OFF, LED will be off too, it means the first code has been entered
6. Turn ignition on again, LED will keep flashing once per second, repeat step 5 and step 6 to enter the second, the third and the fourth code
7. After the fourth code is entered, if all codes are correct, the system will disarm, LED will be on. If the code is not correct, LED will keep flashing quickly for 10 seconds and the system will stay in arming

For disarming failure, turn ignition OFF, close the door for 10 seconds. Then try again from step 1

4-PIN code: - - -