

PE-007

(Trunk Release) the central control door lock timer choice



Operation Instruction:

- 1. lock
Press on the remote controller once with the direction light flash once, and then the central control door lock will be locked.
- 2. Unlock
Press on the remote controller once with the direction light flash once, and then the central control door lock will be unlocked.
- 3. Trunk release
Long press for 2.5 seconds, the direction light will flash three and trunk release simultaneously.
- 4. Make a choice for timing the central control door lock (electric lock/pneumatic lock) The small/thin conducting wire on the outer covering of the main unit lead outside (arc), cut off the wire to set as 4 seconds for pneumatic lock. In fact, all was set as 0.5 seconds for electric lock while leaving factory.

Circuit Diagram of Remote Central -Control-Lock system

