

MANUAL OF CYCLONE C1 MOTORCYCLE ALARM

Congratulations on the purchase of your state of the art Motorcycle security system. This system has been designed to provide years of trouble-free operation.

This owner's guide should help you to get the most out of your system. Please take the time to read it prior to using the system.

Operation Instruction

🔒 Set up Alarm

🔓 Disarm Alarm

⚡ Bike Finder

ARMING THE ALARM SYSTEM

To arm the alarm system, turn the ignition switch OFF, press the 🔒 button. Siren will bleep once and the alarm system will enter into arming status and the LED flash slowly after 3 seconds. If motorcycle is slightly moved, the alarm will bleep 4 times. If it's moved hard then full reaction will occur and sound for 25 seconds and the LED flash faster.

DISARMING THE ALARM SYSTEM

To disarm the alarm system, press the 🔓 button, the siren will bleep twice and system will return to normal status, LED turn off. If the system is on alarming status, press 🔓 button to stop alarm.

BIKE FINDER

Press ⚡ button once, the system will enter into bike finding status: the siren will indicate the position of the motorcycle.

3.Sensitivity Adjustment:

Press 🔒 + ⚡ button at the same time, the siren will whistle three times and then the system enters into the sensitivity adjustment status. The sensitivity level will go the higher grade when presses the 🔒 button, and go down the lower grade when press the ⚡ button. The times of the siren whistling shows that the grade levels, there are totally four sensitivity grades. Quit from the sensitivity adjustment status by pressing the 🔓 button.

Alarm Wiring Installation

1. Connect RED wire to constant power input (+) 12v supply from the battery.
2. Connect Green wire to ground or negative (-) 12v supply from the battery.

Installation Diagram

Antenna

Cyclone C1

