




## Installation Of Start Assistant Device With Original Car Key With Chip

In order to start your car properly, please connect the wires according to the above diagram, and then operate as follows.

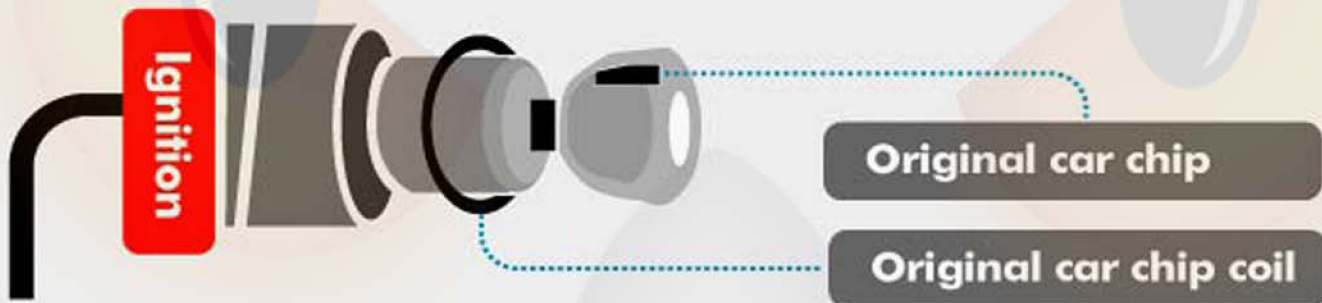

1. Take down the steering wheel cover, and then take out the original car key chip coil. See picture A, B.
2. Take out the original car key chip. Bind the chip and the coil together with electric tape. See picture C, D. Put them away inside the car.



Picture A



Picture B



Picture C



Picture D